



Maxi-Dip
large dip
ø 13 cm
Art. Nr. 39 7755

Maxi-Krug
large jug
ø 13 cm, 1,5 l
Art. Nr. 39 1014

Zitruspresse
lemon squeezer
ø 10 cm
Art. Nr. 39 7754



Mini-Krug
small jug
ø 10 cm, 0,5 l
Art. Nr. 39 1013



Kaffee-/Teekanne
coffee/tea pot
1,5 l
Art. Nr. 39 1125



Midi-Dip
medium dip
ø 11 cm
Art. Nr. 39 7757

Karaffe
carafe
ø 10 cm, 1 l
Art. Nr. 39 7758

Mini-Dip
small dip
ø 9 cm
Art. Nr. 39 7756



Milch-Gießer
milk jug
ø 8 cm, 0,3 l
Art. Nr. 39 1015

Midi-Dip
medium dip
ø 11 cm
Art. Nr. 39 7757

Saucenportionsgefäß
sauce bowl, small
0,2 l
Art. Nr. 39 3203



Salzfläschchen
salt flask
Art. Nr. 39 7505



Pfefferfläschchen
pepper flask
Art. Nr. 39 7506



Espresso-Tasse
espresso cup
0,09 l
Art. Nr. 39 4724

Unterteller
saucer
ø 11 cm
Art. Nr. 39 3500



Café Americano-Tasse
Café americano cup
0,25 l
Art. Nr. 39 4731

Unterteller
saucer
ø 16 cm
Art. Nr. 39 3539



Macchiato-Tasse
macchiato cup
0,35 l
Art. Nr. 39 4727

Unterteller
saucer
ø 16 cm
Art. Nr. 39 3539



Kaffee-Tasse
coffee cup
0,2 l
Art. Nr. 39 4725

Unterteller
saucer
ø 16 cm
Art. Nr. 39 3539



Cappuccino-Tasse
cappuccino cup
0,25 l
Art. Nr. 39 5105

Unterteller
saucer
ø 16 cm
Art. Nr. 39 3539



Café au lait-Tasse
café au lait cup
0,45 l
Art. Nr. 39 4728

Unterteller
saucer
ø 16 cm
Art. Nr. 39 3539



Mini-Becher
small cup
0,09 l
Art. Nr. 39 4604

Unterteller
saucer
ø 11 cm
Art. Nr. 39 3500



Maxi-Becher
large cup
0,35 l
Art. Nr. 39 4605

Unterteller
saucer
ø 16 cm
Art. Nr. 39 3539



Zuckerhut
sugar loaf
0,4 l
Art. Nr. 39 2012

Delikatessenhut
deli jar
0,1 l
Art. Nr. 39 2013



Gewürzflasche
spice bottle
0,18 l
Art. Nr. 39 7759

Gewürzfläschchen
small spice bottle
0,08 l
Art. Nr. 39 7794



Maxi-Schüssel
large bowl
ø 25 cm
Art. Nr. 39 2949



Midi-Schüssel
medium bowl
ø 16 cm
Art. Nr. 39 2962
ø 19 cm
Art. Nr. 39 2948



Mini-Schüssel
small bowl
ø 14 cm
Art. Nr. 39 2947



Suppen- und Soßenschale
soup- and sauce bowl
0,45 l
Art. Nr. 39 2951



Mini-Platte
small platter
23 cm
Art. Nr. 39 3327



Mini-Menüplatte
small menu platter
17x17 cm
Art. Nr. 39 3340



Midi-Menüplatte
medium menu platter
28x19 cm
Art. Nr. 39 3334

Maxi-Menüplatte
large menu platter
37x26 cm
Art. Nr. 39 3335

Gemüseinsatz
vegetable inset
Art. Nr. 39 7780

Midi-Backform
medium baking dish
28x19 cm
Art. Nr. 39 7767

Maxi-Backform
large baking dish
37x26 cm
Art. Nr. 39 7768

Rechaud, 2tlg.:
rechaud, 2 pieces:
Art. Nr. 39 7781

Untersetzer
coaster
17,5x17,5 cm
Art. Nr. 39 7783

Mini-Backform
small baking dish
17x17 cm
Art. Nr. 39 7782



Frühstücksteller
breakfast plate
ø 22 cm
Art. Nr. 39 3455



Suppenteller
soup bowl, deep
ø 21 cm
Art. Nr. 39 3456



Essteller
dining plate
ø 27 cm
Art. Nr. 39 3457



Servierteller
gourmet dinner plate
ø 32 cm
Art. Nr. 39 3458



Fischplatte
fish platter
40 cm
Art. Nr. 39 3318



 
Fingerfood-Platte
fingerfood platter
30 cm
Art. Nr. 39 3338



Mega-Platte
extra large platter
38 cm
Art. Nr. 39 3330



Maxi-Platte
large platter
33 cm
Art. Nr. 39 3329



Midi-Platte
medium platter
28 cm
Art. Nr. 39 3328



Mini-Platte
small platter
23 cm
Art. Nr. 39 3327

Design: Barbara Schmidt



KAHLA



> > <



#FORM 2003

